Karbonn AURA
User Manual

Android 5.1 (Lollipop) is the Operating System for your Touch Screen smart phone - Karbonn Aura.

1 Safety & Notice **3**
2 Your Phone **4**
2.1 Battery 5
2.1.1 Remove and install of the Battery. 5
2.1.2 Battery charging 5
ATTENTION: **6**
2.2 Connect network 6
2.2.1 SIM card 6
2.2.2 Insertion of the SIM Card 6
2.2.3 Insertion of the Memory Card 6
2.2.4 Turning the Phone On or Off 6
2.3 Home screen 6
3 Function Menu **7**
3.1 Using the mobile phone memory card as USB mass storage 7
3.2 WLAN 8
3.2.1 Open the WLAN and connect to a wireless network 8
3.3 Bluetooth 9
4 Application **9**
4.1 Backup and Restore 9
4.2 Browser 9
4.2.1 Open Browser 9
4.3 Calculator 9
4.4 Calendar 9
4.5 Camera 10
4.5.1 Camera 10
4.5.2 Video recorder 10
4.6 Clock 11
4.7 Contacts 11
4.8 Downloads 11
4.9 Email 11
4.10 File manager 11
4.11 FM radio 12
4.12 Gallery 12
4.13 Call History 12
4.14 Messaging 12
4.14.1 Send SMS 12
4.14.2 Send MMS 12
4.15 Music 13
4.15.1 Open music player 13
4.15.2 Enjoy music 13
4.15.3 Add to playlists 13
4.15.4 Management play lists 13
4.15.5 Add to play lists 13
4.15.6 Set music use as ringtone 13

4.15.7 Set sound effects 13
4.16 Phone 13
4.17 Setting 14
4.17.1 Wi-FI 14
4.17.2 Bluetooth ..... **Error! Bookmark not defined.**
4.17.3 Data usage 14
4.17.4 More 14
4.17.5 Audio profiles 14
4.17.6 Display 14
4.17.7 Storage 15
4.17.8 Battery 15
4.17.9 Apps 15
4.17.10 Location 15
4.17.11 Security 15
4.17.12 Language & input 15
4.17.13 Backup Reset 15
4.17.14 Scheduled power on &off 16
4.17.15 Date & time 16
4.17.16 Accessibility 16
4.17.17 About phone 16
4.18 Sound recorder 16
4.19 Video player 16
4.19.1 Open the video player 16
4.19.2 Enjoy video 17

1 Safety & Notice

WARNING: Please pay attention to these guidelines, not following them may be dangerous and illegal.

- **SWITCH OFF IN RESTRICTED AREA**
- Switch the device off when near mobile phone use is not allowed or when it may cause interference or danger such as near the fuel tanks, chemicals, Aircraft or blasting areas. Keep the device away from the children.
- While driving please obey local laws and regulations with regard to use of the device., .always keep your hands free to operate the vehicle while driving, road safety comes first.
- Non-original accessories and components are not provided with repair warranty qualification.
- Please do not disassemble your phone by yourself, if your phone is out of order, please contact your supplier.
- Please do not charge the Smart Phone before battery is installed. Do not short-circuit the battery.
- Smart Phone must be charged in a good ventilated and cooling environment, and away from flammable and explosive materials.

- In order to demagnetization, please keep Smart Phone away from the magnetic material, such as disks, credit card etc.
- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, remove the battery, and contact with the supplier.
- Do not use the Smart Phone in too high or too low temperature environment, and do not expose the Smart Phone to strong sunlight or high humidity.
- Do not use liquid or wet cloth with strong detergent to clean the device.
- This Smart Phone has Camera, video recording and sound recording functions; please follow the relevant laws and regulations to use those functions. Photograph, video recording and sound recording without authorization may be illegal.
- While using the network functions, please do not download the files which have virus, do not install any photos and ring tones which have been damaged. doing so may void warranty
- Please dispose of batteries according to local regulations, and use recycle when possible. Do not dispose battery as household waste.

STATEMENT: **Our Company reserves the right to revise this manual content without prior notice**.

2 Your Phone

The pictures in this manual are only for reference, If individual picture does not match with the product in kind. Please refer to the customer care..

Get Started

! Important: This device is designed to be used with a SIM card, use of incompatible SIM cards may result in the device not working and could cause damage to the device or SIM card. Make sure the phone is properly switched off when removing battery and inserting the SIM

2.1 Battery

2.1.1 Remove and insert of the Battery.

- When removing the battery follow the following steps:
  ① Firmly lift the battery cover from bottom left corner of the phone while the phone is faced down;

  ② Gently push the battery forward and lift it up.

- When inserting the battery follow the following steps:
  ① Make the battery metal contact completely with the phone in the battery compartment, and then push the battery as shown in the picture below.

  ② Put the battery cover on.

Warning: Do not connect any external electric power directly to the battery, this may result battery explosion and cause injury

2.1.2 Battery charging

- Plug the charger connector with the phone, and plug the charger into the electrical outlet.

- At this time the charge level icon will repeatedly flash at the top right corner of the mobile phone's screen; showing that battery is charging when charging is complete,

unplug the charge connector from the electrical outlet and the mobile phone.

ATTENTION:

- Charging must be performed in a well-ventilated area with a temperature between -10°C and +45°C. The factory-supplied charger must be used. Using an unapproved charger could cause damage to the battery and void warranty.

2.2 Connect network

2.2.1 SIM card

Before using your phone, you must first insert a valid and active SIM (Subscriber Identity Module) card in the phone from your network provider.

Your phone will not work with invalid SIM.

Warning: Do not connect any electrical wires to the SIM card metal slots

2.2.2 Insertion of the SIM Card

- Turn off the phone; remove the battery and unplug other external power sources.
- Insert the SIM card into the SIM slot.

- When you need to remove the SIM card, please first turn off the phone, remove the battery, then remove the SIM card.

2.2.3 Insertion of the Memory Card

It is recommended to use external memory card in order to have better performance of this Device

- Turn off the phone; remove the battery and unplug other external power sources.
- Insert the T-FLASH card to the T-FLASH trough.

- When you need to remove T-Flash card, please first turn off the phone, remove the battery, then remove the memory card.

2.2.4 Turning the Phone On or Off

To turn ON or OFF the phone, hold down **the Power key for few second**.

If you turn ON the phone without having inserted the SIM card, phone will display "**No SIM card**". After inserting the SIM card, the phone will automatically check if the SIM is activated on the Network.After startup, according to the prompt, set boot wizard, press enter standby interface.

2.3 Home screen

Turned on and unlock the screen, the display shows the interface is the Home screen;

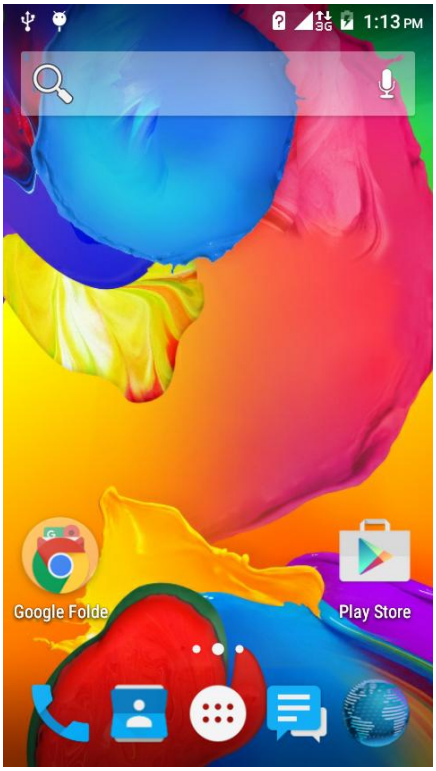

In addition to the diagram shown in the shortcut icon of the Home screen, need to add or delete a folder, other shortcuts or widgets. When idle space after use, you can slide horizontally on the screen to open the home of the extension interface and add the desired content.

3 Function Menu

3.1 Using the mobile phone memory card as USB mass storage

1. Use USB line will be mobile phone connected to the computer. The status bar will show the notification icon.

2. Open the notice panel.

3. In the notification panel, touch “USB connected”, and then touch "turn on USB storage". when you want to disconnect, can touch ”turn off USB storage”

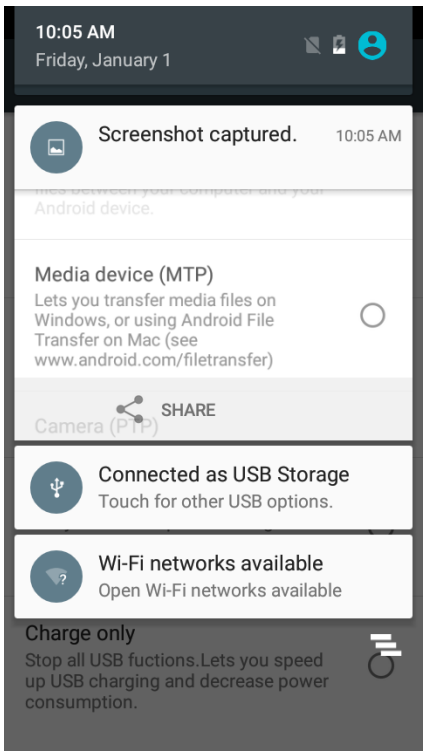
10:05 AM
Friday, January 1
Screenshot captured.
10:05 AM
Media device (MTP)
Lets you transfer media files on Windows, or using Android File Transfer on Mac (see www.android.com/filetransfer)
SHARE
Connected as USB Storage
Touch for other USB options.
Wi-Fi networks available
Open Wi-Fi networks available
Charge only
Stop all USB fuctions.Lets you speed up USB charging and decrease power consumption.

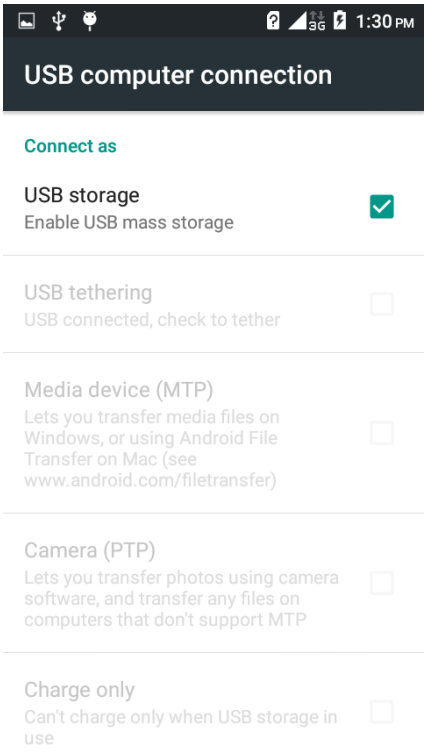
1:30 PM
USB computer connection
Connect as
USB storage
Enable USB mass storage
USB tethering
USB connected, check to tether
Media device (MTP)
Lets you transfer media files on Windows, or using Android File Transfer on Mac (see www.android.com/filetransfer)
Camera (PTP)
Lets you transfer photos using camera software, and transfer any files on computers that don't support MTP
Charge only
Can't charge only when USB storage in use

3.2 WLAN

Wireless Local Area Network (WLAN) links two or more devices using some wireless distribution method and providing a connection through an access point to the wider internet.

NOTICE: The WLAN signal coverage distance is about 100 meters and will depend on the quantity, infrastructure, and other signals penetrate the object and decide.

3.2.1 Open the WLAN and connect to a wireless network

1. Press the Menu key, click on Settings-> Wi-Fi.

2. Select and open Wi-Fi. The phone will automatically scan can be used a wireless network.

3. Click on the Wi-Fi settings. Then WLAN network will display a list of WLAN to find the network of the name and security Settings (open network or with WEP, WPA/WPA2 encryption). If the opening set of WLAN network notice, to find a cell phone in the open wireless network can be used in the status bar shows the icon( ).

4. Touch one of the WLAN network to connection. When you select open network, mobile phone will be connected to the network. If selected is WEP, WPA/WPA2 encryption network, it must first corresponding input password, and then the touch connection

NOTICE: When the phone is connected to a wireless network, the status bar will display the WLAN icon ( ), and displays the approximate signal strength (light up the number of strip).If touch mobile phone at present the connected to a wireless network, will display

the name of the state, WLAN network, speed, signal strength, safety information and IP address. If you want to remove phone wireless networks set, please touch this window on the "don't save". If you want to connect to the network, you must enter again these Settings.

Unless you choose not to save network, or the next mobile phone to connect to previously had connected encryption wireless network, will not have to enter a password accordingly. The network will search by WLAN, also is the mobile phone does not need to perform additional steps can be connected to the WLAN network.

3.3 Bluetooth

1. Press the Menu key, click on-> Settings.

2. Click on “BT” to open Bluetooth. After open, the status bar will appear Bluetooth ( ).then will begin to scan for Bluetooth devices within range. All the equipment will show up in Bluetooth devices list below.

Important: Default password is XXXX Matching and connecting Bluetooth headset

4 Application

4.1 Backup and Restore

Can backup and Restore you personal data and App to SD Card, Can Restore to the phone.

4.2 Browser

Through a web browser, you can connect to the internet, Internet settings are default to MTN SIM card.

4.2.1 Open Browser

Touch Brower can open the browser. Interface as shown in the diagram:

In the browser, you can open the page by the following methods:

1. Click on the browser address bar, input for the open web site. Click.

2. Touch the menu key-> bookmarks, choose need to open the bookmarks or click on the most visited/history records label page to choose open other web pages.

4.3 Calculator

A have four basic function of the calculator, convenient for simple mathematical calculation you.can you make calculator to separate thousand with a comma eg 1,000

4.4 Calendar

Enter calendar submenu, the calendar will display on the screen and the current date marked with the special color background frame.

4.5 Camera

4.5.1 Camera

Your mobile phone and camera with dual, it is equipped with a high vivid camera picture which you can use to take pictures at anytime or place and then save them on your mobile phone, use them as your mobile phone wallpaper or send them to your friends and colleagues via MMS and email.

4.5.1.1 Open camera

Click on the camera can turn on the camera.

Warm prompt: in the camera's interface, you can click " " fast switching to the camera to video camera, click to panoramic photo mode

Taking a photo

1. During the view-finding mode, adjust the lens to allow what is being photographed to appear in the viewfinder.

2. After framing the picture you wish to take, keep the camera steady and press” to take photo;

3. After taking photos will auto save to camera folders in picture;

4. Click “ ” return to camera interface.

4.5.2 Video recorder

The mobile-phone supports shoot function, the extent of film restrict according as current memory space.

4.5.2.1 Recorder

1. During the view-finding mode, adjust the lens to allow what is being photographed to appear in the viewfinder.

2. Press” “ to recorder.

3. Press “ ” end recorder.

Complete recorder, you can click on the icon of the right, in the menu for the following in operation:

1. Click delete, you can delete the video.

2. Click share, you can through the information, E-mail or Bluetooth, etc and good friends share this video.

3. Click “ ” ,you can view the video.

4. Click more, You can view the video detailed information.

4.6 Clock

1. Click on the screen switch display mode.

2. Click on the " " set the alarm clock. Click the default alarm clock, or click add alarm clock or by the menu button-> add alarm, Checked open alarm clock check box. Set the alarm time, repeat and other necessary information. After the completion of the set, you also can press menu button-> delete alarm /preview the alarm clock deleted or edit alarm.

4.7 Contacts

You can store phone numbers on your phone's memory.

This menu gives you quick and easy access to the people you want to search. You can view and create contacts on your phone, and can also import contacts stored on your SIM card.

To access this menu, press HOME, and touch the application tab, and then select People.

You can also press the People icon in the home screen and select the Contacts tab.

4.8 Downloads

Show all content downloaded from the browser. Click to view the downloaded content; checking the box you can choose to delete and clear all selected downloads.

4.9 Email

Enter E-mail address and login password, choose communication protocol，Select data account [Edit wireless local area network or SIM card to connect to the E-mail network]，Setting receiving server and send server address，Edit user name [username need to use the name generate itself], and save Settings, enter the mailbox options to write and receive mails.

Note: Different email accounts communications business agreement may be different, communication protocol choose wrong can lead to you can send and receive E-mail.

Selectable settings as below：

- Account settings

You can change E-mail account Settings, such as name, email address and password and specifications.

- Email notification and ring Settings

Set the notification of email and select the ring settings.

- E-mail inspection frequency Settings

Enter the optional settings of the E-mail checking frequency.

4.10 File Explorer

In the main menu click on file management can enter to file management list, memory

card shows all of the file. Root directory of the document according to the menu button can be new folder, folders and files to copy, view, cut, delete, rename, share and details.

4.11 FM radio

In the menu before please to insert headphones.

1.Click the icon, can search, open Speaker, and have Record FM;

2.Click the icon, can review the channel you have searched;

4.12 Gallery

Click Gallery to enter you can view all the pictures and videos in the T-card. The video files can use the video player.

4.13 Call History

This handset not only can list all calls in reverse chronological order, but also list a floating menu with all, answered, dialed, missed calls for checking call history of different kinds.

4.14 Messaging

Click on the messaging, you can pass the messaging function sending or receiving SMS and MMS.

4.14.1 Send SMS

1. Messaging ->Click the icon “ ” to Compose new message.

2. In the recipient field, enter the recipient number. You can also click “ ” Select recipients from your contacts.

3. Click on a column of input, enter the message content.
4. Click send.
5. Select SIM card.

4.14.2 Send MMS

1. Messaging ->Compose new message.

2. In the recipient field, enter the recipient number. You can also click “ ” Select recipients from your contacts.

3. Press the key

Tip: add a picture,videdos,Audio,Calendar files. You also can choose capture picture, capture video, record audio and slideshow inserted into MMS attachments.

4.15 Music

4.15.1 Open music player

Play music files before, need to music file copy to memory CARDS. Click on the music can open music player.

4.15.2 Enjoy music

1. Click on the artist/albums/songs/ library, find you need to play music files.
2. Click on the music files start playing.

4.15.3 Add to playlists

In order to facilitate the management of your music files, you can create some play lists.

1. Click on the songs tag page.
2. Choose need to add to playlist of music files, long press until pop-up shortcut menu.
3. Click on add to playlist.
4. Click on the new.
5. Input the name of the new play lists.
6. Click save.

Right now you choose music file will be automatically added to the new play list.

4.15.4 Management play lists

1. Music->play list
2. Choose from the list to edit or play playlist, long press until pop-up shortcut menu.

4.15.5 Add to play lists

1. Open the music, choose songs tag page

2. Choose need to add to playlist of music files, long press until pop-up shortcut menu.

3. Click add to playlist.

4. Choose need to add playlist.

4.15.6 Set music use as ringtone

1. Open the music.
2. Choose songs/play list tag page.
3. The music files to choose and long press until pop-up shortcut menu.

4. Click used as phone ringtone.

4.15.7 Set sound effects

1. Open the music.

2. Press the menu button-> sound effects.

3. Tick enable sound, choose to enable the sound effects and checked open.

4.16 Phone

Use this menu to call your friends.

To access this menu, press HOME, touch the application tab, and select Phone.

Or you can press the Call icon in the home screen.

4.17 Setting

4.17.1 Wi-FI

- To turn on the wifi the can scan the network to browse wap page or other apps;
  - Wi-Fi: select on or off.
  - Wi-Fi settings: Set up and management wireless access points, etc.
  - Wi-Fi Direct settings: Set up and management WLAN Direct.
  - Tethering & portable hotspot: Will you move data connection through cell phone USB or as a portable WLAN hot share.
  - VPN settings: Setup and manage virtual private network.
  - Mobile networks: Check the mobile data usage, set access point name and network operators.
  - GPRS transfer prefer: Will you move data connection through cell phone USB to share.

4.17.2 BT

- Open/close Bluetooth.
- Bluetooth settings: ON/OFF

4.17.3 Data usage

Measured by your phone, Your carrier's data usage according may differ;

4.17.4 More

- Airplane mode: Disable all wireless connection.
- VPN settings: Setup and manage virtual private network.
- Tethering & portable hotspot: Will you move data connection through cell phone USB or as a portable WLAN hot share.
- Wi-Fi Direct settings: Set up and management WLAN Direct.
- Mobile networks: Check the mobile data usage, set access point name and network operators.
- GPRS transfer prefer: Will you move data connection through cell phone USB to share.

4.17.5 Audio profiles

- General
- Silent
- Vibration
- Outdoor

4.17.6 Display

- Brightness: Set the brightness of the phone display
- Wallpaper: Set up the wall paper of mobile phones

- Theme: to set up the phone's theme;
- Auto-rotate screen: Set up if open automatically rotating screen.
- Sleep: Automatic adjustment screen lock the delay time before
- Font size: to set the phone's font size;

4.17.7 Storage

- SD card: view SD card total space and available space.
- Mount SD card: After unloading SD card SD card will not display.
- Erase SD card: Remove the SD card all the data.
- Internal storage: Display size available space.

4.17.8 Battery

View Battery Condition

4.17.9 Apps

- Unknown sources: Setting is allowed to install the electronic market to provide application.
- Manage applications: Management and delete installation applications.
- Running services: Check and control the currently running services.
- Storage use: Check the application of storage space.

4.17.10 Location

- Use wireless network: The use of mobile network in application check position.
- Use GPS satellites: Accurate location to street level.
- GPS EPO assistance: Use GPS auxiliary material (EPO) to accelerate the GPS positioning.
- EPP settings: View the modified EPO configuration information
- A-GPS: Use auxiliary data can accelerate the GPS positioning.
- A-GPS: View the modified A-GPS Settings.

4.17.11 Security

You can configure settings that help secure your phone and its data.

4.17.12 Language & input

- Language settings: can select language and user dictionary.
- Keyboard settings: choose the Android keyboard, Sogou input method and Google Pinyin input method.
- Input method: Choose input method way.

4.17.13 Backup Reset

- Automatic restore: When reinstalling an app,restore backed up settings and data
- DRM reset: Delete all DRM licenses
- Factory data reset: Erases all data on phone;

4.17.14 Scheduled power on &off

Each time, including the timing of the setup time and repeat way content, set up complete and checked open the alarm clock check box, when the corresponding setting time, will be set according to the switch machine operation and executive boot or shutdown action.

4.17.15 Date & time

- Automatic: Use networks offer a time and date.
- Set date: Manually edit date.
- Select time zone: Manually choose time zone.
- Set time: Manual set a time.
- Use 24-hour format: set Open/close.
- Select date format: Choose the date the format of the show

4.17.16 Accessibility

Accessibility: set Open/close.

Power button ends call: Press power key words will end the call, not shut down the screen.

Quick boot: set Open/close.

4.17.17 About phone

- System updates
- Status: Check the current state of the mobile phone.
- About battery: View power consumption situation
- Legal information: check the open source license
- About version: Display model.

4.18 Sound recorder

The sound recorder is a simple recording tool that provides all of the required functionalities for you to manage voice files.

To start recording

1.In any mode, press Home Key, touch the application tab and then touch Sound Recorder.

Touch button to start recording.

2.During the recording, you can pause the voice recording anytime by touching button .

Then choose to and touch Save to save the recording file.

3.To exit sound recorder, you can press Back Key.

4.19 Video player

4.19.1 Open the video player

1. Click to see the video of the choice in the folder.

2. Choose the video files to play, click open can use video player play.

4.19.2 Enjoy video

1. Choose the video files to play, and click open.

2. Play interface click " " stop playing video, click on the" " Play video; Click on the " " choose showing the way.z